

# KANE945

## Industrial Flue Gas Analyser



Stock No: 19823

May 2016

© Kane International Limited

# CONTENTS

|  | Page No: |
|--|----------|
| 1. ANALYSER LAYOUT AND FEATURES.....     | 4-8      |
| KEY FEATURES.....                        | 4        |
| OPTIONS.....                             | 4        |
| INSTRUMENT FEATURES AND KEYPAD.....      | 5        |
| INSTRUMENT LAYOUT (REAR).....            | 6        |
| STANDARD PROBE CONFIGURATION.....        | 7        |
| ANALYSER CONNECTIONS .....               | 8        |
| 2. SAFETY WARNING.....                   | 9        |
| 3. FIRST TIME USE.....                   | 10       |
| 4. NORMAL START UP SEQUENCE.....         | 11-17    |
| EVERY TIME YOU USE THE ANALYSER.....     | 11       |
| AUTOMATIC CALIBRATION .....              | 11       |
| MAIN DISPLAYS .....                      | 12       |
| 4 PAGE MODE .....                        | 13       |
| LINE SCROLL MODE .....                   | 14       |
| 8 PAGE MODE .....                        | 14       |
| SAMPLING THE FLUE GAS.....               | 15       |
| TAKING A PRESSURE READING .....          | 16       |
| TAKING A FLOW READING.....               | 16       |
| REGULAR CHECKS DURING SAMPLING .....     | 16       |
| NORMAL SHUTDOWN SEQUENCE.....            | 17       |
| 5. MOVING THROUGH THE MENUS .....        | 18-19    |
| THE MENU STRUCTURE .....                 | 18       |
| BASIC OPERATION .....                    | 18       |
| 6. MENU OPTIONS AND SETTINGS.....        | 20-26    |
| MAIN MENU .....                          | 20       |
| SUB MENU – 1. <b>MENU</b> .....          | 20       |
| SUB MENU – 2. <b>UNITS</b> .....         | 22       |
| SUB MENU – 3. <b>DISPLAY</b> .....       | 23       |
| SUB MENU – 4. <b>SELECT SET-UP</b> ..... | 23       |

|   |           |
|---|-----------|
| 7. PRINTING INFORMATION.....                      | 27-28     |
| OPTIONAL INFRA-RED THERMAL PRINTER.....           | 27        |
| OPTIONAL WIRELESS MODULE .....                    | 27        |
| PRINTING A 'LIVE' TEST.....                       | 27        |
| STANDARD PRINTOUT .....                           | 28        |
| SOFTWARE COMPATIBILITY.....                       | 28        |
| 8. STORING AND RETRIEVING DATA.....               | 29-30     |
| STORING A 'LIVE' TEST.....                        | 29        |
| VIEWING AND PRINTING A 'STORED' TEST .....        | 29        |
| DELETING DATA .....                               | 30        |
| 9. MAINTENANCE .....                              | 31        |
| EMPTYING AND CLEANING THE IN-LINE WATER TRAP..... | 33        |
| CHANGING THE PARTICLE FILTER.....                 | 33        |
| 10. PROBLEM SOLVING .....                         | 32        |
| 11. ANNUAL SERVICE & RE-CERTIFY .....             | 33-35     |
| RETURNING YOUR ANALYSER TO KANE.....              | 34        |
| PACKING YOUR ANALYSER .....                       | 34        |
| SENDING YOUR ANALYSER .....                       | 34        |
| WHEN WE RECEIVE YOUR ANALYSER .....               | 34        |
| SERVICE RETURNS.....                              | 35        |
| 12. PRODUCT SPECIFICATION.....                    | 37        |
| <br><b>APPENDICES</b>                             |           |
| A. MAIN DISPLAY PARAMETERS .....                  | 38        |
| B. COMBUSTION EFFICIENCY CALCULATION .....        | 41        |
| C. CALCULATION OF FUEL DATA .....                 | 44        |
| D. ELECTROMAGNETIC COMPATABILITY STATEMENT .....  | 45        |
| END OF LIFE DISPOSAL.....                         | 46        |
| <br>PRODUCT REGISTRATION.....                     | <br>49-50 |

# 1. ANALYSER LAYOUT AND FEATURES

## KEY FEATURES

Measures Temperature, Pressure, O<sub>2</sub> and CO as standard.

Stores 150 sets of test results.

Output to IR Printer (optional).

## OPTIONS

(CO & any two other sensors)

High Range CO sensor

Low Range NO sensor

High Range NO sensor


NO<sub>2</sub> sensor

SO<sub>2</sub> sensor

Wireless upgrade (2.1)

Teflon Hose

# INSTRUMENT FEATURES AND KEYPAD



**ON/OFF**



**UP**

Scrolls up through options ie Fuel



**MENU**

Allows access to all menu functions




**DOWN**

Scrolls down through options



**PUMP**

Turns pump on and off




**STORE**

Enters data storage menu



**ENTER**


Accepts a command ie enters a menu option



**PRINT**


Prints current data

## INSTRUMENT LAYOUT (REAR)

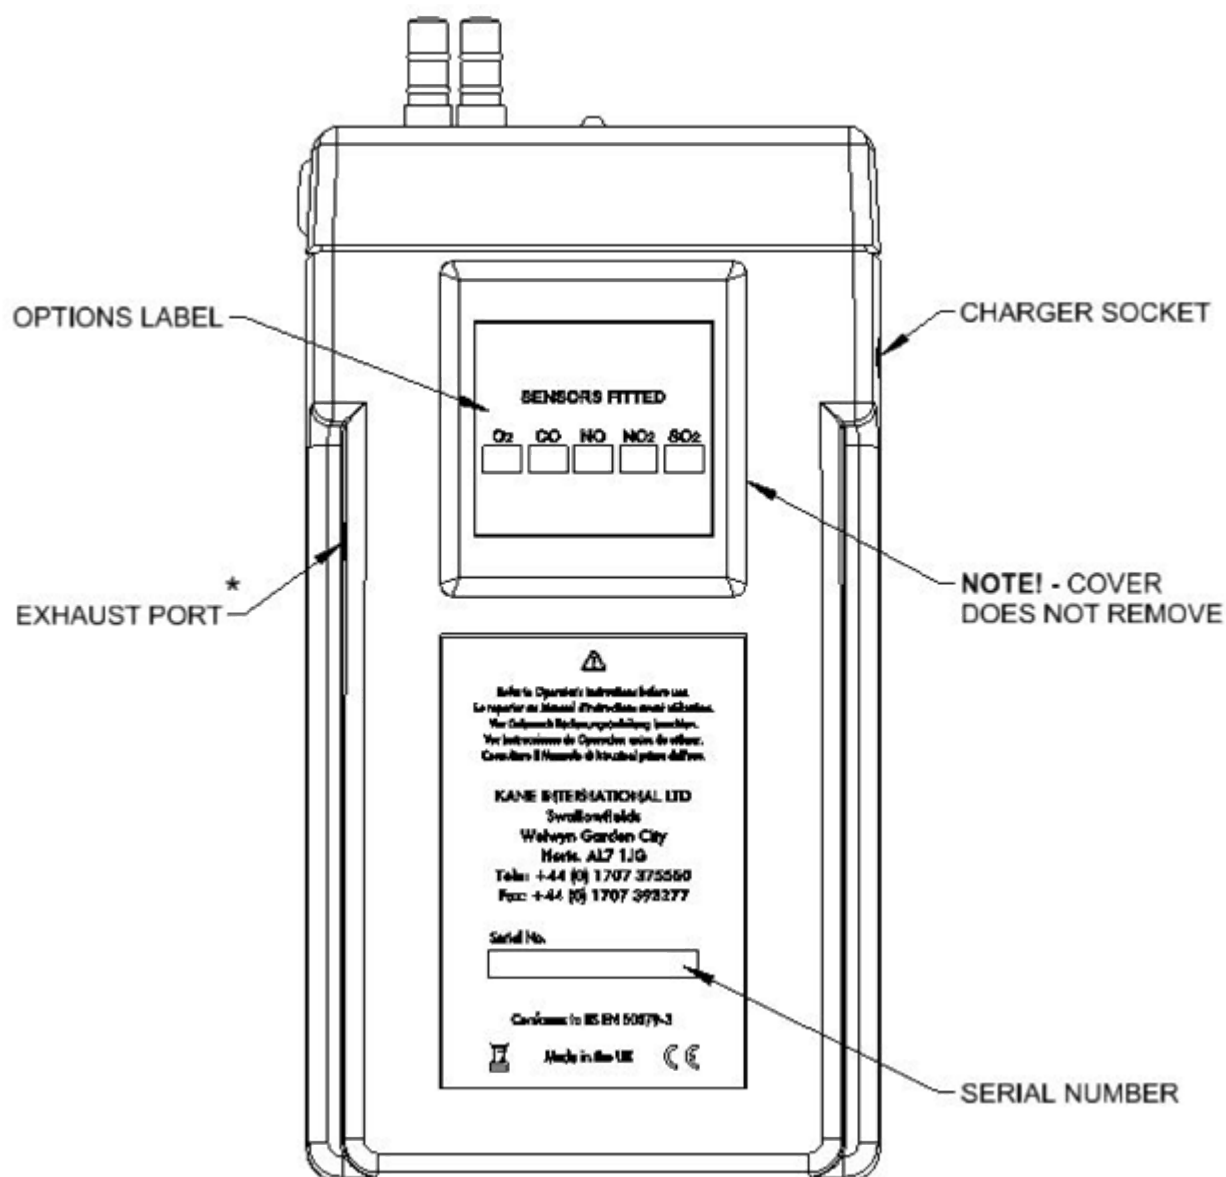


**NOTE:** Do NOT cover exhaust port as this will severely affect analyser operation

## STANDARD PROBE CONFIGURATION

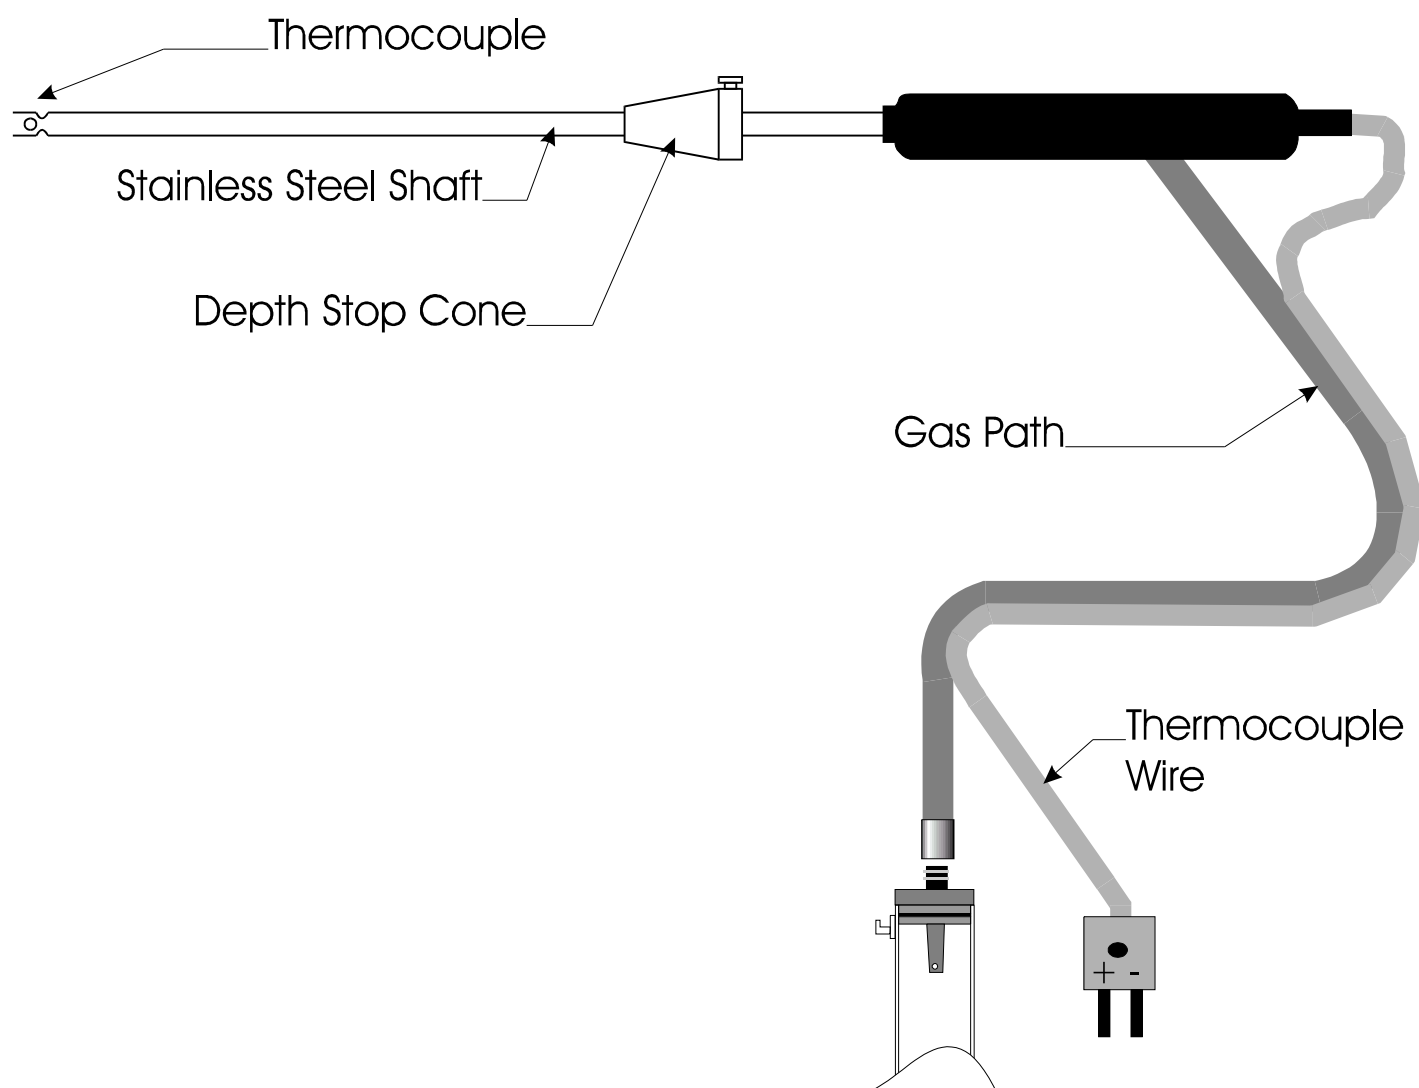

## ANALYSER CONNECTIONS

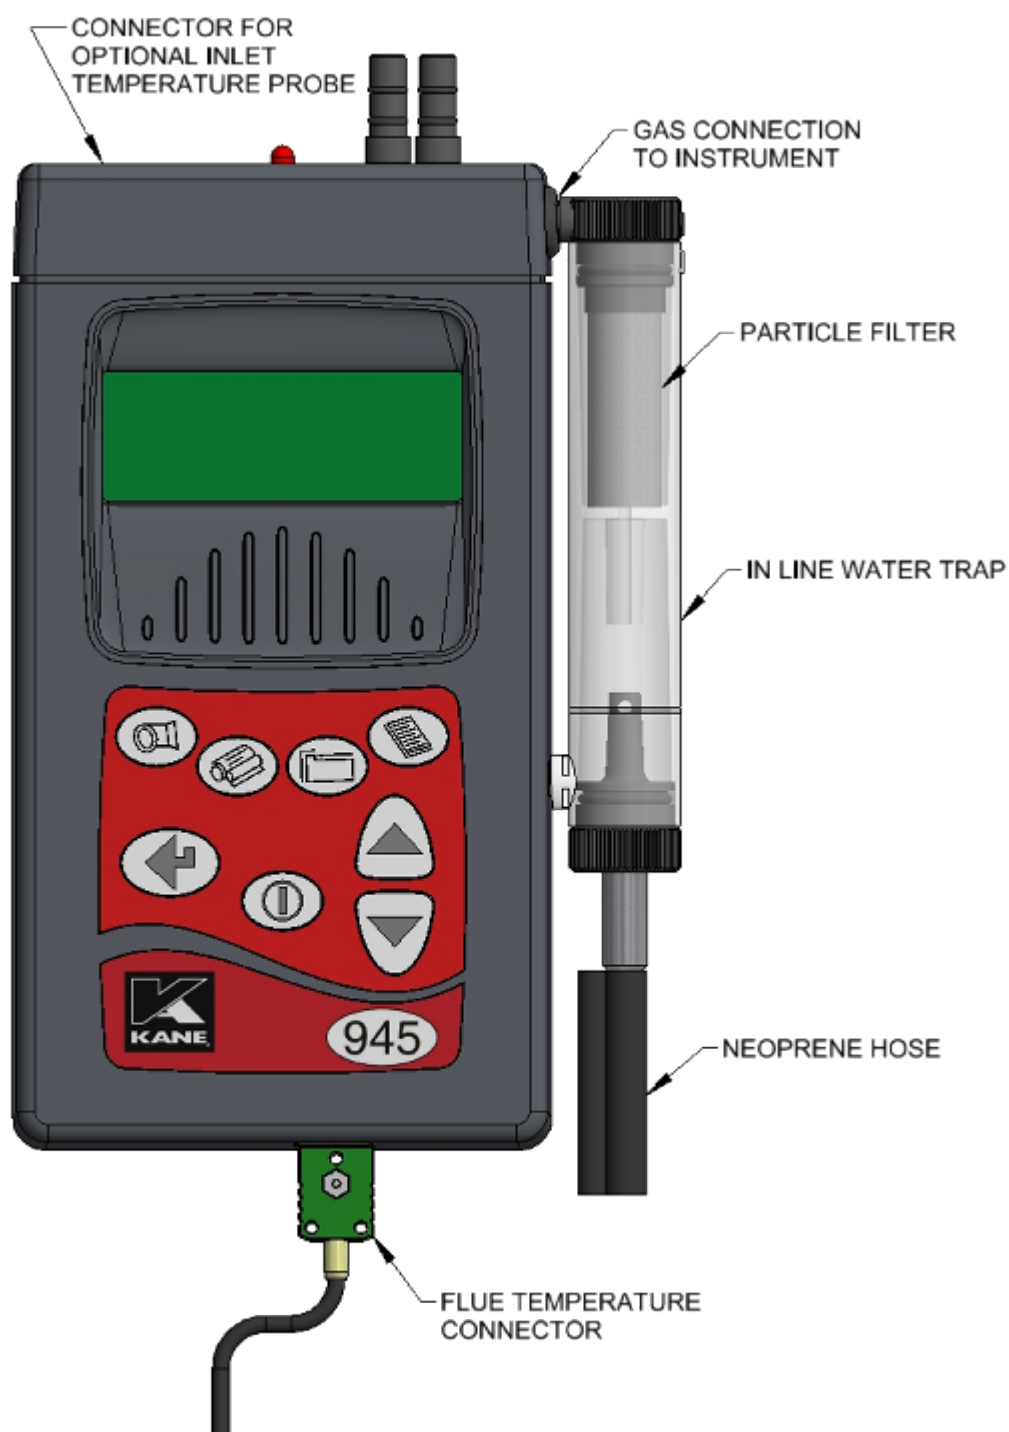



## 2. SAFETY WARNING

This analyser extracts combustion gases that may be toxic in relatively low concentrations. These gases are exhausted from the side of the instrument. **This analyser must only be used in well-ventilated locations by trained and competent persons after due consideration of all the potential hazards.**

Users of portable gas detectors are recommended to conduct a “bump” check before relying on the unit to verify an atmosphere is free from hazard.

A “bump” test is a means of verifying that an instrument is working within acceptable limits by briefly exposing to a known gas mixture formulated to change the output of all the sensors present. (This is different from a calibration where the instrument is also exposed to a known gas mixture but is allowed to settle to a steady figure and the reading adjusted to the stated gas concentration of the test gas).

### **Protection Against Electric Shock (in accordance with EN 61010-1 : 2010)**

This instrument is designated as Class III equipment and should only be connected to SELV circuits.

The battery charger is designated as:

Class II equipment

Installation category II

Pollution degree 2

Indoor use only

Altitude to 2000m

Ambient temperature 0°C-40°C

Maximum relative humidity 80% for temperatures up to 31°C decreasing linearly to 50%RH at 40°C

Mains supply fluctuations not to exceed 10% of the nominal voltage.

### 3. FIRST TIME USE

Charge the battery for 12 hours. Following this, an overnight charge should be sufficient for an average 8 hour day. See Main Parameter displays for Battery Indicator.

The KANE945 has a rechargeable NiMh battery which uses a different charger than other Kane analysers. ***Ensure the correct charger is used or damage may occur to the instrument.***

Check that you have all the items you have ordered.

Take time to read this manual fully. ***Be aware that the analyser configuration that you have purchased may not support all the features detailed in this manual.***

When using the analyser for the first time you will need to choose from:-

- Language selection
- Calibration countdown time
- CO gas alarm
- NOx percentage for calculation
- Time and Date
- Printed header name and telephone number

The SET UP MENU gives details of how to change the above settings.

## 4. NORMAL START UP SEQUENCE

EVERY TIME YOU USE THE ANALYSER

BEFORE SWITCH-ON CHECK THAT:

the particle filter is not dirty

the water trap and probe line are empty of water


all hose connections, etc, are properly made

the probe is sampling CLEAN AMBIENT air

the water trap is correctly fitted and the instrument upright

the flue temperature is connected

Switch ON the instrument by pressing



### AUTOMATIC CALIBRATION

During this sequence the analyser pumps fresh air into the sensors to allow toxic sensors (if fitted) to be set to zero and the Oxygen sensor to be set to 20.9 %.

After switch-on the analyser will briefly display header information :-

**Kane International  
KANE945  
SW19604 Version: 1.02**

And then show the countdown screen :-

**ZERO CAL  
Time: 180  
FRESH AIR PURGE**

The calibration time will count down in seconds to zero. Calibration time may be changed to 90, 120, 180, 300 seconds. See **SET-UP MENU**.

**Note!** Three minutes is recommended to allow the sensors to stabilise fully. Anything less than this may result in drift of the toxic and oxygen sensors in clean ambient air.

To obtain the quoted specification an instrument should be calibrated with clean ambient air at standard temperature and pressure (STP).

Once the time has reached zero an audible beep will be heard and will show the selected fuel on the following display:-

Press 

## NATURAL GAS

\* PRESS – MENU – KEY \*

This zeros the toxic sensor and sets Oxygen to 20.9%. The next screen is the **MAIN DISPLAY** of the analyser:

|         |     |      |
|---------|-----|------|
| NETT    | C   | 0.0  |
| O2      | %   | 20.9 |
| CO      | ppm | 0000 |
| EFF (G) | %   | 0.0  |

Use  and  to change the display.

|         |   |            |
|---------|---|------------|
| CO2     | % | 0.0        |
| FLUE    | C | 0.0        |
| INLT    |   | NOT FITTED |
| AMBIENT | C | 21.5       |

All parameters are detailed in APPENDIX A - MAIN DISPLAY PARAMETERS.

## MAIN DISPLAYS



The main display can be changed to show either 4 or 8 parameters at one time.

Two options are available when 4 parameters are selected.

- **4 Page Mode** displays 4 lines of data in set format, each page is predefined.
- **Line scroll mode** allows you to customise the display to show the data you require.
- **8 Page Mode** displays 8 parameters on 4 lines in set format, the bottom two can be changed.

Changing between the different modes is detailed in **DISPLAY MENU**.

## 4 PAGE MODE

Use the  and  keys to change the information that is displayed on the screen. The following pages are available:

1. 

|                    |          |                 |
|--------------------|----------|-----------------|
| <b>NATURAL GAS</b> |          |                 |
| <b>DATE</b>        |          | <b>23-05-15</b> |
| <b>TIME</b>        |          | <b>12:31:35</b> |
| <b>BATTERY</b>     | <b>%</b> | <b>54</b>       |
2. 

|                |            |             |
|----------------|------------|-------------|
| <b>NETT</b>    | <b>C</b>   | <b>0.0</b>  |
| <b>O2</b>      | <b>%</b>   | <b>20.9</b> |
| <b>CO</b>      | <b>ppm</b> | <b>0000</b> |
| <b>EFF (G)</b> | <b>%</b>   | <b>0.0</b>  |
3. 

|                |                   |             |
|----------------|-------------------|-------------|
| <b>CO2</b>     | <b>%</b>          | <b>0.0</b>  |
| <b>FLUE</b>    | <b>C</b>          | <b>0.0</b>  |
| <b>INLT</b>    | <b>NOT FITTED</b> |             |
| <b>AMBIENT</b> | <b>C</b>          | <b>21.5</b> |
4. 

|                |             |               |
|----------------|-------------|---------------|
| <b>CO/CO2</b>  | <b>R</b>    | <b>0.0001</b> |
| <b>P INDEX</b> | <b>%</b>    | <b>0.01</b>   |
| <b>XAIR</b>    | <b>%</b>    | <b>0.0</b>    |
| <b>Prs</b>     | <b>mbar</b> | <b>0.00</b>   |

Screens 5 and 6 will vary dependent on sensors fitted:

5. 



|                        |
|------------------------|
| <b>CO<sub>n</sub></b>  |
| <b>LOSSES</b>          |
| <b>NO<sub>2</sub></b>  |
| <b>NO<sub>2n</sub></b> |
6. 


|                        |
|------------------------|
| <b>NO</b>              |
| <b>NO<sub>x</sub></b>  |
| <b>NO<sub>n</sub></b>  |
| <b>NO<sub>xn</sub></b> |

**TIP** - In 4 page mode only  turns the backlight ON and OFF.

## LINE SCROLL MODE

Line scroll mode allows you to customise the display.

Use the  and  keys to change the bottom line of the display.


Once the correct line is displayed press  to confirm and move the line up. Select the next parameter and repeat until all lines display the desired parameters.

Change bottom line using



and

|             |            |             |
|-------------|------------|-------------|
| <b>NETT</b> | <b>C</b>   | <b>0.0</b>  |
| <b>O2</b>   | <b>%</b>   | <b>20.9</b> |
| <b>CO</b>   | <b>ppm</b> | <b>0000</b> |
| <b>CO2</b>  | <b>%</b>   | <b>0.0</b>  |



to select and move  
parameter up

|            |            |            |             |
|------------|------------|------------|-------------|
| <b>O2</b>  | <b>%</b>   | <b>...</b> | <b>20.9</b> |
| <b>CO</b>  | <b>ppm</b> | <b>...</b> | <b>0000</b> |
| <b>CO2</b> | <b>%</b>   | <b>...</b> | <b>0.0</b>  |
| <b>CO2</b> | <b>%</b>   | <b>...</b> | <b>0.0</b>  |

Select next parameter.

Repeat above until  
display reads desired data

|               |            |            |               |
|---------------|------------|------------|---------------|
| <b>O2:</b>    | <b>%</b>   | <b>...</b> | <b>20.9</b>   |
| <b>CO:</b>    | <b>ppm</b> | <b>...</b> | <b>0000</b>   |
| <b>CO2:</b>   | <b>%</b>   | <b>...</b> | <b>0.0</b>    |
| <b>CO/CO2</b> | <b>R</b>   | <b>...</b> | <b>0.0001</b> |

## 8 PAGE MODE

Displays 8 parameters on the screen at one time. Symbols used in this mode are different from those used in 4 page and line scroll modes and are detailed in APPENDIX A - MAIN DISPLAY PARAMETERS.

|             |              |             |               |
|-------------|--------------|-------------|---------------|
| <b>O2 :</b> | <b>20.9%</b> | <b>CO2:</b> | <b>20.9</b>   |
| <b>CO :</b> | <b>0ppm</b>  | <b>Eff:</b> | <b>0000</b>   |
| <b>PI :</b> |              | <b>ΔT:</b>  | <b>0.0</b>    |
| <b>λ :</b>  |              | <b>Tf:</b>  | <b>0.0001</b> |


The bottom line of the display can be changed to display other parameters.

Use the  and  keys to change this line.

## SAMPLING THE FLUE GAS


Once the automatic calibration procedure has been completed and the specific fuel has been selected (See SELECT menu) the probe can be inserted into the desired sampling point.

It is recommended that the sampling point be located at least two flue diameters downstream of any bend and that the probe tip is in the centre of the flue. With balanced flues and other domestic units the probe should be positioned far enough into the flue so that no air can 'back flush' into the probe. This will be indicated by a low oxygen reading and/or a low 'Poison Index' reading.

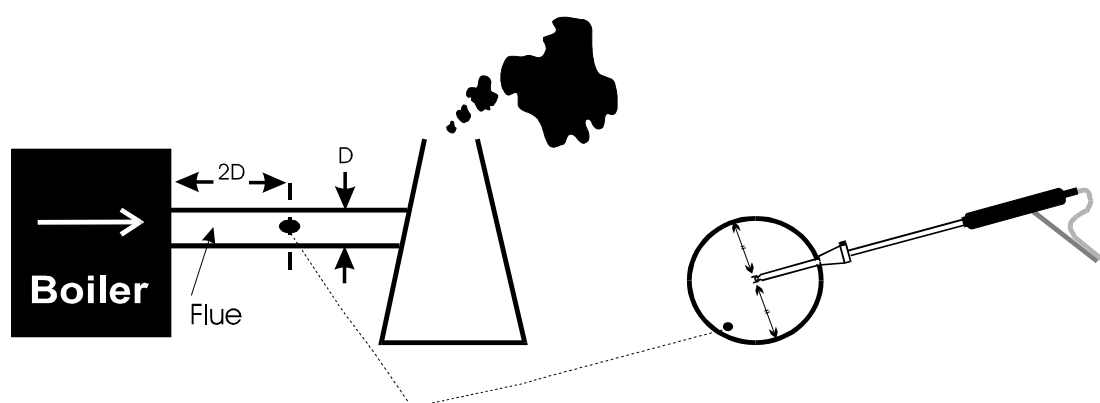

The probe depth stop cone provided with the instrument allows the probe to be used in holes whose diameters range from 8 mm to 21 mm ( $\frac{5}{16}$  to  $\frac{13}{16}$  inch).

The standard probe is rated at 650°C (1202°F). Temperatures of up to 1200°C (2200°F) can be accommodated using an optional high temperature probe.

**TIP:** To conserve battery power, switch off the pump when you are not taking a measurement. Use the  key to turn ON and OFF the pump.

## TAKING A PRESSURE READING

A flue draught measurement can be made at any time.

Connect the standard probe to the pressure sensor inlet and the probe in the flue.

The pressure reading will be displayed :

|                |             |               |
|----------------|-------------|---------------|
| <b>CO/CO2</b>  | <b>R</b>    | <b>0.0000</b> |
| <b>P INDEX</b> | <b>%</b>    | <b>0.00</b>   |
| <b>XAIR</b>    | <b>%</b>    | <b>0.0</b>    |
| <b>Prs</b>     | <b>mbar</b> | <b>2.00</b>   |

To perform a combustion test and display draught pressure at the same time a special probe is required. Contact Kane International or Authorised Distributor for details.

## TAKING A FLOW READING

In the UNITS menu set the pressure units to metres/sec (m/sec). These are the only units available for flow measurement.

This also set the pressure display to Pascal (Pa). There is a range limit for the Pitot calculation of 15Pa to 4600Pa (0.15mbar to 46mbar).

For most accurate flow measurement the flue gas temperature should also be measured. If a flue temperature probe is not fitted then the internal ambient measurement is used. 'Flue' temperature must be between -10°C to +650°C.

## REGULAR CHECKS DURING SAMPLING

Care must be taken at all times not to exceed the analysers operating specifications, in particular ensure the following :-


- Do not exceed the maximum temperature of the flue probe.
- The analyser internal temperature does not exceed normal operating range, typically 0-50°C.
- **DO NOT PLACE THE INSTRUMENT ON A HOT SURFACE.**
- The water trap is vertical at all times. Water condenses in the probe line and can quickly fill the water trap when the probe is moved. Take care and watch the water trap closely.
- The in-line particle filter is clean and does not become blocked.



## NORMAL SHUTDOWN SEQUENCE

DO THIS EVERY TIME YOU USE THE ANALYSER

Remove the probe from the flue - **TAKE CARE! THE PROBE WILL BE HOT** - and allow it to cool naturally. Do not immerse the probe in water as this will be drawn into the analyser and damage the pump and sensors.

Once the probe is removed from the flue press  and the analyser will count down from 30 to switch off.

|                       |
|-----------------------|
| <b>OFF      30</b>    |
| <b>MENU TO ESCAPE</b> |

If you have not finished but press  by mistake, you can press



to return to normal operation and not switch OFF.

## 5. MOVING THROUGH THE MENUS

### THE MENU STRUCTURE

|       |         |   |   |
|-------|---------|---|---|
| MENU: | SELECT  | → | FUEL<br>O2 REF<br>SMOKE<br>RESET<br>PITOT                       |
|       | UNITS   | → | TEMP<br>GAS<br>PRS<br>EFF                                       |
|       | DISPLAY | → | LIGHT<br>MODE<br>CONTRAST                                       |
|       | SETUP   | → | LANG<br>CO MENU<br>CALENDAR<br>ZERO<br>NOX %<br>HEADER<br>PRINT |

### BASIC OPERATION

From the MAIN DISPLAY


|        |     |      |
|--------|-----|------|
| NETT   | C   | 0.0  |
| O2     | %   | 20.9 |
| CO     | ppm | 0000 |
| EFF(G) | %   | 0.0  |

Press  to access the MAIN MENU


| MAIN MENU        |                   |
|------------------|-------------------|
| <b>1. SELECT</b> | <b>3. DISPLAY</b> |
| <b>2. UNITS</b>  | <b>4. SETUP</b>   |

Press  and  to move cursor up and down

| MAIN MENU        |                   |
|------------------|-------------------|
| <b>1. SELECT</b> | <b>3. DISPLAY</b> |
| <b>2. UNITS</b>  | <b>4. SETUP</b>   |

Press  to access selected Menu


| MAIN MENU        |                   |
|------------------|-------------------|
| <b>1. SELECT</b> | <b>3. DISPLAY</b> |
| <b>2. UNITS</b>  | <b>4. SETUP</b>   |

Press  to select parameter


|               |             |
|---------------|-------------|
| <b>FUEL</b>   | : LIGHT OIL |
| <b>O2 Ref</b> | : OFF       |
| <b>SMOKE</b>  | : OFF       |
| <b>RESET</b>  | : NO        |

Use  and  to change setting i.e. fuel selected

|               |                        |
|---------------|------------------------|
| <b>FUEL</b>   | : <b>N</b> NATURAL GAS |
| <b>O2 Ref</b> | : OFF                  |
| <b>SMOKE</b>  | : OFF                  |
| <b>RESET</b>  | : NO                   |

Press  to enter value and move to next parameter

|  |             |
|--|-------------|
| <b>FUEL</b>                                    | : LIGHT OIL |
| <b><input checked="" type="radio"/> O2 Ref</b> | : OFF       |
| <b>SMOKE</b>                                   | : OFF       |
| <b>RESET</b>                                   | : NO        |

Press  to save settings and return to the MAIN MENU

| MAIN MENU        |                   |
|------------------|-------------------|
| <b>1. SELECT</b> | <b>3. DISPLAY</b> |
| <b>2. UNITS</b>  | <b>4. SETUP</b>   |

Press  to return to the MAIN DISPLAY.



## 6. MENU OPTIONS AND SETTINGS

### MAIN MENU

The MAIN MENU consists of 4 sub menus:

| MAIN MENU |            |
|-----------|------------|
| 1. SELECT | 3. DISPLAY |
| 2. UNITS  | 4. SETUP   |

All sub-menus are accessed using  and exited using .

The  and  keys move the cursor within a menu and allow parameters to be changed.

**TIP:** Holding down one of these keys scrolls through the data quicker.

### SUB MENU - 1. SELECT


Page 1:

|        |               |   |
|--------|---------------|---|
| FUEL   | : NATURAL GAS |   |
| O2 Ref | : OFF         |   |
| SMOKE  | : OFF         |   |
| RESET  | : NO          | ↓ |

Page 2:

|       |        |   |
|-------|--------|---|
| PITOT | : 1.00 | ↑ |
|       |        |   |

This menu allows selections to be made for the parameters detailed below.


**FUEL :** Select the fuel being used by the boiler from either a standard fuel stored in the analyser or by entering the user fuel. Once the correct fuel has been selected press  to view the fuel constants.

| NATURAL GAS |         |     |         |
|-------------|---------|-----|---------|
| K1g         | : 0.350 | K1n | : 0.390 |
| K_2         | : 11.89 | K_3 | : 9.83  |
| K_4         | : 32    | O2r | : 3.0   |

Calculation of fuel constants are detailed in the APPENDIX. Fuel constants will have to be calculated before a user fuel can be entered.

To enter the user fuel select

'User Fuel' and Press



#### USER FUEL

|     |   |       |     |   |       |
|-----|---|-------|-----|---|-------|
| K1g | : | 0.000 | K1n | : | 0.000 |
| K_2 | : | 0.00  | K_3 | : | 0.00  |
| K_4 | : | 00    | O2r | : | 00    |

Use  and  to select the correct value.

#### USER FUEL

|     |   |       |     |   |       |
|-----|---|-------|-----|---|-------|
| K1g | : | 0.350 | K1n | : | 0.000 |
| K_2 | : | 0.00  | K_3 | : | 0.00  |
| K_4 | : | 00    | O2r | : | 00    |

Use  to move to the next parameter, repeat above until all

parameters are correct. Press  to return to SELECT menu.

**O2 Ref :** Toxic gas measurements can be referenced to defined oxygen levels. Reference values can be set from 1-20%, to AUTO or more normally to the default value - OFF. Setting to AUTO uses the figure in the FUEL constants data.

Once AUTO is set it remains active until O2 Ref is set to OFF or a user value. This means that if the fuel type is changed the O2 Ref will always be set by the value stored in FUEL Type.

Oxygen referencing is required by some regulations such as TA-LUFT. If a reference value is selected then toxic gas measurements will be displayed with the symbol **(n)** attached to the reading. i.e. CO(n)


What does Oxygen reference mean ?

If 3 % O<sub>2</sub> reference is selected and 5 % O<sub>2</sub> is measured in the flue then toxic gas values will be recalculated as if 3 % were measured. The equation for referencing is detailed in the Appendix.


Oxygen referencing prevents false readings being submitted, e.g. allowing more air into the boiler will increase the oxygen level in the flue and hence dilute any toxic gas reading. Oxygen referencing gives readings as if they were undiluted.

**SMOKE:** Allows the user to enter a smoke test number from 0-9. This value will be printed on the standard printout. Default value is OFF.

**RESET :** Allows the user set the Oxygen to 20.9% and zero the toxic sensors without turning the analyser off.

Selecting YES and  will display the following screen.

|                       |                        |
|-----------------------|------------------------|
| <b>RESET SENSORS</b>  |                        |
| <b>O2 % : 20.9</b>    | <b>CO &amp; NO = 0</b> |
| <b>PRESS ENTER</b>    |                        |
| <b>MENU TO ESCAPE</b> |                        |

After pressing  the analyser will count down for 10 seconds and then return to the main display.

**WARNING:** The sensors must only be reset if you are sure they have been sampling fresh air for at least 3 minutes. Errors in measurement will occur if the sensors are reset during or just after sampling.

**PITOT:** When pressure units set to m/s Pitot Mode is active, adjust the PITOT setting/value here.

## SUB MENU - 2. UNITS

|               |                |
|---------------|----------------|
| <b>TEMP</b>   | <b>: C</b>     |
| <b>GAS</b>    | <b>: ppm</b>   |
| <b>PRESS.</b> | <b>: mbar</b>  |
| <b>EFF.</b>   | <b>: GROSS</b> |

Allows all displayed units to be changed.

**TEMP:** Choose from Centigrade, °C, or Fahrenheit, °F.

**GAS:** Changes the toxic gas measurement units. Select from volumetric readings, parts per million (ppm) or mass flow reading milligrams per cubic meter (mg/m<sup>3</sup>). When set to m/s. Pitot flow mode is active. FLOW will show on measure screen instead of XAIR.

**PRESS.:** Flue draught can be displayed in millibar (mbar), hectaPascals (hPa), millimeters water gauge (mmWG) or inches water gauge (in WG).

**EFF.:** Efficiency can be selected for gross or net values. Gross efficiency assumes latent heat of vaporisation is lost in the boiler and hence will be lower than net efficiency. For natural gas the difference will be approximately 11%.

Efficiency is displayed as EFF (G) or EFF (N) respectively. Should the instrument detect that a condensing boiler is under test then it automatically switches to a third mode that is displayed as EFF (C).



## SUB MENU - 3. DISPLAY

|                 |                  |
|-----------------|------------------|
| <b>LIGHT</b>    | <b>: OFF</b>     |
| <b>MODE</b>     | <b>: 8-PAGE</b>  |
| <b>CONTRAST</b> | <b>: DEFAULT</b> |

Allows the configuration of the display to be changed.

**LIGHT:** Choose from ON or OFF.

**MODE:** Select 4 or 8 Page Mode or Line Scroll Mode as detailed in section MAIN DISPLAYS.

**CONTRAST:** The contrast is set to a DEFAULT value or can be adjusted  
↑ LIGHTER or ↓ DARKER. Use the  and  keys to adjust.

## SUB MENU - 4. SET UP

The set up menu allows the following parameters to be set / altered.

- Language.
- Automatic calibration time
- CO gas alarm
- NOx percentage for calculation
- Date and time
- Printout header
- Printer type

Page 1:

|                 |           |   |
|-----------------|-----------|---|
| <b>LANG</b>     | : ENGLISH |   |
| <b>CO MENU</b>  | :         |   |
| <b>CALENDAR</b> | :         |   |
| <b>ZERO</b>     | : 90      | ↓ |

Page 2:

|               |             |   |
|---------------|-------------|---|
| <b>NOx%</b>   | : -         | ↑ |
| <b>HEADER</b> |             |   |
| <b>PRINT</b>  | : KANE IRP2 |   |

| Parameter      | Description  | Settings  |
|----------------|--|---|
| <b>LANG:</b>   | Changes the analysers displayed and printed language.  | <b>ENGLISH</b><br><b>SPANISH</b><br><b>DUTCH</b><br><b>FRENCH</b><br><b>ITALIAN</b> |
| <b>ZERO:</b>   | Allows setting of the Autocalibration time in minutes. Care must be taken when changing this parameter as sensors may drift from zero if too short a time is used. Kane International advise 3 minute countdown. | <b>90 seconds</b><br><b>120 seconds</b><br><b>180 seconds</b><br><b>300 seconds</b> |
| <b>NO REF:</b> | Displayed on the Nitric Oxide unit only. Allows the percentage P in the following calculation to be set. The default value set is 5%. Note the percentage allows for NO <sub>2</sub> in a typical boiler.        | <b>OFF</b><br><b>1-9%</b>   |

$$\text{NO}_x = \text{NO} + \text{P}\% \text{ NO}$$

**CALENDAR:** Allows the user to change the date and time. (24 hour clock).


This screen will be shown once the parameter is entered:

|               |                     |
|---------------|---------------------|
|               | <b>hh : mm : ss</b> |
| <b>TIME</b>   | <b>13 : 53 : 26</b> |
| <b>FORMAT</b> | <b>dd : mm : yy</b> |
| <b>DATE</b>   | <b>23 07 : 15</b>   |



**FORMAT:** Changes the date format for display and printing. **dd : mm : yy**  
**yy : mm : dd**  
**mm : dd : yy**


To change the time position the cursor on


TIME and press .

The cursor will now be to the left of the 13:

|               |              |
|---------------|--------------|
|               | hh : mm : ss |
| <b>TIME</b>   | 13 : 53 : 26 |
| <b>FORMAT</b> | dd : mm : yy |
| <b>DATE</b>   | 23 07 : 15   |

Using  and  scroll through the setting options i.e. 0-23.

Once the correct hour is set press  to move to the next parameter, the cursor will move to the left of minutes (53). Move to each parameter until the correct time is set.

Pressing  after setting the seconds will return the cursor to the left of the screen.

Format and Date are set in a similar manner.


**Header:** Allows two lines of 20 characters to be programmed into the analyser. The header appears on the top of the standard printout. This can be used to print your company name and/or phone number.

This screen shows the standard header setting with the cursor now shown underlining the K in Kane:

|   |
|---|
| <b>KANE945</b>  |
| <b>YOUR COMPANY NAME &amp;<br/>PHONE NUMBER HERE<br/>LEFT KEY USE STORE</b> |


By using  and  any letter or number can be chosen.

Once the correct character is displayed,

use  to move right to the next.

Move along until all characters spell the desired name or phone number. If you need to go back and change a character

use  to move left.

Press  to return to the SET UP menu.


**CO MENU:** Once an alarm has been exceeded the display will flash every two minutes warning the user of an alarm state and display the gas concentration.

-----

**CO ALARM**  
**1010 ppm**

-----

A similar display will be shown during a RECHARGE BATTERY and PUMP OFF alarms.

Press  to return to the SET UP menu.


**CO ALARM:** Allows an alarm level to be set on for the CO reading. This is set as a default at 1000ppm.

**OFF**  
**0-4000ppm**

**PRINT:** Allows printer type to be changed.  
Note: Wireless passkey is 1111

**KMIRP**  
(default)  
**KMIRP2**  
**WIRELESS**  
(if fitted)

## 7. PRINTING INFORMATION



Supplied as accessories for the KANE945 are infra-red thermal printers. Read the manual supplied with each printer prior to operation. Connections to the KANE945 are detailed below:

### OPTIONAL INFRA-RED THERMAL PRINTER

This does not require a cable to transmit the data but uses an infra-red (IR) link similar to a TV remote control. The IR emitter is positioned on the top of the KANE945 and the bottom of the printer. Ensure they are pointing at each other and within 300 mm, with no obstructions in the way. Data may be lost if transmission is interrupted. Keep the KANE945 pointing at the printer until the printout has finished.

### OPTIONAL WIRELESS MODULE

The KANE945 can communicate with a PC and mobile devices.


Compatibility with 2.1 for Android / PC.

Please see the KANE945 software tab at:

<https://www.kane.co.uk/products/kane945-commercial-flue-gas-analyser>

Data can either be printed from a 'live' test or from stored data. Printing of stored data is detailed in **STORING AND RETREIVING DATA**.

### PRINTING A 'LIVE' TEST

During a combustion test the KANE945 will print data on request. With the analyser showing the MAIN DISPLAY press  and current data will be sent to the printer.

The display will show the following until data transmission is complete:

\*\*\*\*\* **PRINTING** \*\*\*\*\*

## STANDARD PRINTOUT

The standard printout is:

|  |            |      |
|--|------------|------|
| KANE945                                  |            |      |
| YOUR COMPANY NAME &<br>PHONE NUMBER HERE |            |      |
| SERIAL:                                  | 123456789  |      |
| DATE:                                    | 27-07-2015 |      |
| TIME:                                    | 10:26:12   |      |
| -----                                    |            |      |
| NATURAL GAS                              |            |      |
| O2                                       | 20.7       | %    |
| CO                                       | -----      | ppm  |
| CO2                                      | 02>20      | %    |
| CO/CO2                                   | 0.0000     | R    |
| CO <sub>n</sub>                          | -----      | ppm  |
| P INDEX                                  | 0.00       | %    |
| FLUE                                     | -----      | °C   |
| INLT                                     | -----      | °C   |
| NETT                                     | -----      | °C   |
| AMBIENT                                  | 28.1       | °C   |
| Prs                                      | 0.5        | mbar |
| FLOW                                     | -----      | m/s  |
| XAir                                     | 02>20      | %    |
| EFF (G)                                  | 02>20      | %    |
| EFF (N)                                  | 02>20      | %    |
| LOSSES                                   | 02>20      | %    |
|  |            |      |
| O2 Ref                                   | OFF        |      |
| -----                                    |            |      |


## SOFTWARE COMPATIBILITY

The KANE945 when fitted with the 2.1 module is compatible with:

ANDROID: Printer App

PC: KANE LIVE

## 8. STORING AND RETRIEVING DATA



The KANE945 can store combustion tests. Once stored, the data can be viewed on the display or downloaded to a PC or printer.

### STORING A 'LIVE' TEST

While performing a test and viewing the data on the MAIN display access the STORE menu as follows :-

Press  to access the STORE MENU

| STORE MENU           |                |
|----------------------|----------------|
| MODE                 | : <b>STORE</b> |
| LOCATION             | : 3            |
| PRESS 'STORE' TO LOG |                |

**Mode:** Select from the following :-

**STORE** - Allows data to be stored in memory.

**VIEW / PRINT** - Stored data can be viewed or printed.

**DELETE** - Clears all data in memory.

**Location:** Automatically allocates a location in the memory of the instrument for the next test. On the display shown above the next location will be 3.

To store a test set **MODE** to **STORE** and press . The current readings will be stored in the analysers memory.

**Tip :** Make a note of the location number for your particular test as it may be useful when downloading or printing.



### VIEWING AND PRINTING A 'STORED' TEST


Multiple tests can be printed easily with the KANE945.


Select PRINT under MODE in the STORE menu. This feature is in addition to the VIEW/PRINT, STORE and DELETE options.

Press  to access the STORE MENU

| STORE MENU    |                |
|---------------|----------------|
| MODE          | : <b>PRINT</b> |
| LOCATION      | : 1 TO 10      |
| PRESS 'PRINT' |                |

The cursor will move to the first number, use the  and  to select the location and start printing.


Press  to move the cursor to the second number, select the last location to print.

To print the data press . In the screen shown above locations 1 to 10 will be printed.

During printing the following will be shown:


**PRINT TESTS  
1 TO 10  
PRINTING TEST 1**


**NOTE:** While the display above is shown (i.e. the instrument is printing a test) the keypad is disabled. To exit from printing wait until the current test has finished and the display below is shown:

Press  to exit the print routine. The instrument will return to main display:


**PRINT TESTS  
1 TO 10  
PLEASE WAIT  
MENU TO ESCAPE**

## DELETING DATA



To delete the data in stored memory press  to obtain the STORE MENU (as above) :-

Press  to access the STORE MENU

**STORE MENU  
MODE : DELETE  
LOCATION : 3  
PRESS 'ENTER' TO DELETE**

Press  to access delete data screen

**ENTER TO ERASE DATA  
MENU TO ESCAPE**


Press  to delete data in memory, press  to exit delete data screen.

## 9. MAINTENANCE

### EMPTYING AND CLEANING THE IN-LINE WATER TRAP

The in-line water trap should be checked and emptied on a regular basis. Water vapour will condense and gather in the probe line. This may move suddenly to the trap when the probe is moved. Care should be taken at all times.


Emptying of the water trap is detailed below :-

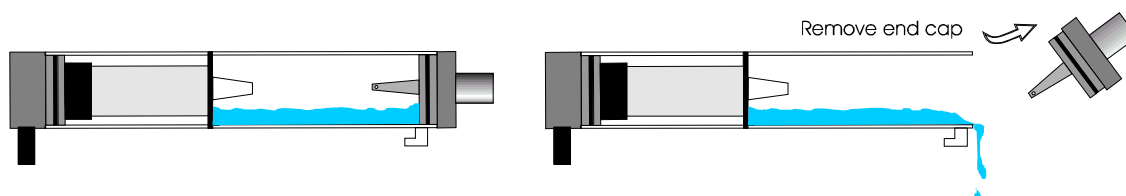

Carefully remove the end cap from the in-line housing. Dispose of the condensate in a suitable drain, care must be taken as it could be acidic. If condensate spills onto the skin or clothing, clean off immediately using fresh water, seek medical advice if problems occur.

### CHANGING THE PARTICLE FILTER

This is a very important part of the analyser and should be changed regularly. It prevents dust and dirty particles entering the pump and sensors and hence causing damage. The filter **MUST** be changed when it is discoloured.

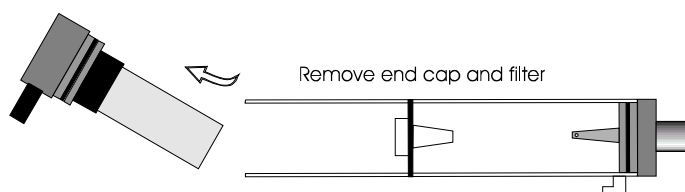

Remove the end cap from the in-line filter housing. Carefully remove the paper filter element and dispose of it. Clean the inside of the filter housing with a suitable soft cloth. Insert a new filter element onto the spigot in the filter housing and carefully replace the end cap.

## 10. PROBLEM SOLVING

The following is a list of problems that may occur on the instrument through its operating life. If the cause of the fault is not easy to identify then we advise you contact Kane International Service Department or an International Distributor for expert advice.

| Fault symptom   | Causes  |
|---|---|
| <ul style="list-style-type: none"><li>• Oxygen too high</li><li>• CO<sub>2</sub> too low</li></ul>            | <ul style="list-style-type: none"><li>• Air leaking into probe, tubing, water trap, connectors or internal to instrument.</li><li>• Oxygen cell needs replacing.</li></ul>  |
| <ul style="list-style-type: none"><li>• Oxygen Error (FAULT)</li><li>• Toxic sensor Error (FAULT)</li></ul>   | <ul style="list-style-type: none"><li>• Calibration time set too short and instrument not allowed to stabilise</li><li>• Instrument has been stored in a cold environment and is not at normal working temperature.</li><li>• Oxygen cell or toxic sensors needs replacing.</li></ul> |
| <ul style="list-style-type: none"><li>• Analyser not holding charge</li><li>• Analyser not charging</li></ul> | <ul style="list-style-type: none"><li>• Battery exhausted.</li><li>• AC charger not giving correct output.</li><li>• Fuse blown in charger plug.</li></ul>  |
| <ul style="list-style-type: none"><li>• Analyser does not respond to flue gas</li></ul>                       | <ul style="list-style-type: none"><li>• Particle filter blocked.</li><li>• Probe or tubing blocked.</li><li>• Pump not working or damaged with contaminants.</li><li>• Probe connected to pressure connector.</li></ul>   |
| <ul style="list-style-type: none"><li>• Flue temperature readings erratic</li></ul>                           | <ul style="list-style-type: none"><li>• Temperature plug reversed in socket.</li><li>• Faulty connection or break in cable or plug.</li></ul>   |
| <ul style="list-style-type: none"><li>• Analyser automatically switches off in operation.</li></ul>           | <ul style="list-style-type: none"><li>• Battery below alarm level.</li><li>• Ambient temperature above 50°C.</li><li>• Battery quickly discharging and is faulty.</li></ul>   |
| <ul style="list-style-type: none"><li>• Display shows dark lines and no response from ON/OFF key.</li></ul>   | <ul style="list-style-type: none"><li>• Fault has occurred on the instrument electronics and requires resetting. Contact Kane International or Distributor.</li></ul>   |



## 11. ANNUAL SERVICE & RE-CERTIFY

Whilst the sensors have an expected life of more than two years in normal use it is recommended that the analyser is serviced and re-certified at least annually. This is so that long term drift on the sensors and electronics can be eliminated. Local regulation may require more frequent re-calibration and users should check with appropriate authorities to ensure they comply with relevant guidelines.

Kane International has service facilities at Atherton near Manchester Tel: 01942-873434 (the primary service centre for UK customers) and at Welwyn Garden City in Hertfordshire Tel: 01707-375550 (the primary service centre for non-UK customers).

By sending your analyser back to Kane for an annual fixed price service (check [www.kane.co.uk](http://www.kane.co.uk) for details) you have the opportunity to extend the warranty on your analyser to 5 years.

## RETURNING YOUR ANALYSER TO KANE

When returning your KANE945, please always ensure that you enclose:

- ✓ Your full contact details
- ✓ A daytime telephone number
- ✓ Details of faults you might have experienced

## PACKING YOUR ANALYSER

When returning your analyser, please pack it appropriately to prevent any damage during transit.

Before sealing your package, please ensure that you have enclosed the items listed above and that it is clearly marked for the attention of:

Northern Service Centre  
Kane International Ltd  
Gibfield Park Avenue  
Atherton  
Manchester  
M46 0SY

Southern Service Centre  
Kane International Ltd  
Kane House, Swallowfield  
Welwyn Garden City  
Hertfordshire  
AL7 1JG

## SENDING YOUR ANALYSER

Once the analyser has been securely packed then your package is ready for shipment back to Kane. If you do not have an account with a courier company you can take your package to your local Post Office. It is advisable to send the package by Special Delivery so that it is insured and traceable while in transit.

## WHEN WE RECEIVE YOUR ANALYSER

On receipt of your package, our Service Engineers will inspect the analyser and any accessories and confirm to you the total service cost. Once you have accepted this the work will be carried out, and upon completion the analyser returned to you.

If you have any questions that we haven't answered, please feel free to contact our Northern Service Centre:

Tel: 01942 873434  
Fax: 01942 873558  
Email: [nservice@kane.co.uk](mailto:nservice@kane.co.uk)

Tel: 01707 384834  
Fax: 01707 384833  
Email: [sservice@kane.co.uk](mailto:sservice@kane.co.uk)

SERVICE RETURNS (Simply cut out and attach to your package)

Northern Service Department  
Kane International Ltd  
Gibfield Park Avenue  
Atherton  
Manchester  
M46 0SY



Southern Service Department  
Kane International Ltd  
Kane House, Swallowfield  
Welwyn Garden City  
Hertfordshire  
AL7 1JG



Northern Service Department  
Kane International Ltd  
Gibfield Park Avenue  
Atherton  
Manchester  
M46 0SY





## 12. PRODUCT SPECIFICATION

| Parameter                                     | Resolution   | Accuracy  | Range                                  |
|---|--|---|--|
| <b>Temp Measurement</b>                       |  |   |  |
| Flue Temperature                              | 0.1°C/F  | $\pm 2.0^{\circ}\text{C} \pm 0.3\%$ reading   | 0-1200°C/32 -2200°F                    |
| Inlet Temperature                             | 0.1°C/F  | $\pm 1^{\circ}\text{C} \pm 0.3\%$ reading   | with suitable probe<br>0-50°C/32-122°F |
| <b>Gas Measurement</b>                        |  |   |  |
| Oxygen  | 0.1%   | $\pm 0.2\%^{*1}$  | 0-25%                                  |
| Carbon Monoxide<br>H <sub>2</sub> compensated | 1ppm   | $\pm 5\text{ppm} < 100\text{ppm}$<br>$\pm 20\text{ppm} < 400\text{ppm}^{*1}$<br>$\pm 5\% > 400\text{ppm}$ | 0-4000ppm                              |
| Carbon Monoxide,                              | 1ppm   | $\pm 20\text{ppm} < 400\text{ppm}^{*1}$<br>$\pm 5\% < 5000\text{ppm}$<br>$\pm 10\% > 5000\text{ppm}$      | 0-100000ppm                            |
| Nitric Oxide<br>Low range                     | 1ppm   | $\pm 3\text{ppm} < 20\text{ppm}$<br>$\pm 5\text{ppm} < 100\text{ppm}$                                     | 0-100ppm                               |
| Nitric Oxide<br>(optional)                    | 1ppm   | $\pm 5\text{ppm} < 100\text{ppm}^{*1}$<br>$\pm 5\% > 100\text{ppm}$                                       | 0-5000ppm                              |
| Nitrogen Dioxide<br>(optional)                | 1ppm   | $\pm 3\text{ppm} < 20\text{ppm}$<br>$\pm 5\text{ppm} < 100\text{ppm}$                                     | 100ppm                                 |
| Sulphur Dioxide<br>(optional)                 | 1ppm   | $\pm 5\text{ppm} < 100\text{ppm}$<br>$+5\% > 100\text{ppm}$   | 0-5000ppm                              |
| Pressure                                      | 0.1mbar  | $\pm 0.5\%$ full scale  | 150 mbar                               |
| Carbon Dioxide <sup>*2</sup>                  | 0.1%   | $\pm 0.3\%$ reading   | 0-99.9%                                |
| Losses <sup>*2</sup>                          | 0.1%   | $\pm 1.0\%$ reading   | 0-99.9%                                |
| Efficiency <sup>*2</sup>                      | 0.1%   | $\pm 1.0\%$ reading   | 0-99.9%                                |
| Excess Air <sup>*2</sup>                      | 0.1%   | $\pm 0.2\%$   | 0-2885.0%                              |
| Temp (Nett) <sup>*2</sup>                     | 1.0°C/F  | $\pm 2^{\circ}\text{C} \pm 0.3\%$ reading   | 0-1200°C/32-2200°F                     |
| CO/CO <sub>2</sub> ratio <sup>*2</sup>        | 0.0001   | $\pm 0.0001$  | 0-0.9999                               |
| Poison Index <sup>*2</sup>                    | 0.01%  | $\pm 0.01$  | 0-99.99                                |
| <b>Pre-programmed Fuels</b>                   | Natural gas, Town gas, Gascor, Light Oil, Heavy Oil, Propane, Butane, Anthracite, Coke, Coal, Kinsale Gas. |   |  |
| <b>Dimensions</b>                             |  |   |  |
| Weight  | 1kg  |   |  |
| Handset                                       | 220mm x 55mm x 120mm   |   |  |
| Probe   | L240mm x Dia8mm with 285mm long stainless steel shaft, type K thermocouple and 1.5m long neoprene hose     |   |  |
| <b>Ambient Operating Range</b>                | -5°C to +50°C/10% to 90% RH non condensing   |   |  |
| <b>Power Supply</b> (battery charger)         | Input: 110Vac/220 Vac nominal<br>Output: 12 Vac off load   |   |  |
| <b>Battery Life</b>                           | >8 hours from full charge  |   |  |

<sup>\*1</sup> Using dry gases at STP

<sup>\*2</sup> Calculated

# APPENDICES

## A. MAIN DISPLAY PARAMETERS

The parameters and their meanings are detailed as follows : -

|                           |  |
|---------------------------|--|
| <b>DATE:</b>              | Analyser date. See <b>SET UP MENU</b> to change  |
| <b>TIME:</b>              | Analyser time. Use <b>SET UP MENU</b> to change  |
| <b>BATTERY:<br/>(BAT)</b> | Displays the battery level from 0-100%. The analyser will flash <b>RECHARGE BATTERY</b> at less than 10% of charge. With the charger connected the display shows <b>AC ON</b> .  |
| <b>NETT:<br/>(ΔT)</b>     | Nett temperature calculated by deducting the internal AMBIENT temperature from the measured FLUE temperature. Displays in either °C (C) or °F (F) and will display NOT FITTED (N/F) if flue probe is not connected.<br><br>If an external INLET probe is used then INLET is deducted from FLUE.      |
| <b>O2:</b>                | Oxygen reading in percentage %.  |
| <b>CO:</b>                | Carbon Monoxide reading indicated in ppm or mg/m <sup>3</sup> . If the figures are referenced to oxygen then the display will show <b>CO(n)</b> . See SELECT menu 5.2.2 for oxygen reference. The display will read 'O2 > 20%' if referenced values selected and instrument is in clean ambient air. |
| <b>EFF (G):</b>           | Combustion Efficiency calculation displayed in percentage. Gross G or Net N can be set see SELECT menu 5.2.3. The calculation is determined by fuel type see Appendix B for calculation. The efficiency is displayed during a combustion test, '- -' is displayed while in fresh air.                |
| <b>CO2:</b>               | Carbon Dioxide calculation determined by the type of fuel. This only shows a reading when a combustion test is being carried out. '- -' is displayed while in fresh air.   |
| <b>FLUE:<br/>(Tf)</b>     | Temperature measured by flue gas probe in Centigrade or Fahrenheit. Will show ambient temperature after fresh air calibration and <b>NOT FITTED (N/F)</b> or <b>FAULT (FLT)</b> if probe disconnected.   |

|                              |   |
|------------------------------|---|
| <b>INLET:<br/>(Ti)</b>       | Temperature measured by the optional inlet air probe. This probe is plugged into the instrument through the RS232 socket. This figure is used to calculate the NET temperature instead of AMBIENT when fitted.  |
| <b>AMBIENT:<br/>(Ta)</b>     | Temperature measured by the internal sensor, used in the NET temperature calculation if an INLET probe is not fitted.   |
| <b>CO/CO<sub>2</sub> R :</b> | <p>The CO/CO<sub>2</sub> ratio, is the ratio of measured CO divided by calculated CO<sub>2</sub>.</p> <p>It gives an indication of the following :-</p> <p>How good a gas sample the instrument is reading.</p> <p>How clean the boiler is running.</p> <p>For example:</p> <p>A new or clean domestic boiler will display a ratio of less than 0.0040, a unit in need of cleaning 0.0040-0.0080 and a unit in need of major overhaul will show greater than 0.0080.</p> <p>This only shows a reading when a combustion test is being carried out. '- -' is displayed while in clean ambient air.</p> |
| <b>P INDEX:<br/>(PI)</b>     | The CO/CO <sub>2</sub> ratio expressed as a percentage %, called the 'Poison Index' i.e. $P\ INDEX\ \% = 100 \times CO/CO_2$ . '- -' is displayed while in clean ambient air.   |
| <b>XAIR %:<br/>(λ)</b>       | Excess air calculated from the measured oxygen and type of fuel used. During a combustion test 'O <sub>2</sub> > 20%' will be displayed while in clean ambient air.   |
| <b>FLOW:</b>                 | Pitot Flow Rate in m/s when m/s selected in pressure units  |
| <b>Prs:</b>                  | Flue draught pressure reading. Displayed when pressure sensor fitted. See UNITS menu for scales.  |
| <b>NO:</b>                   | Nitric Oxide reading in ppm or mg/m <sup>3</sup> . Displayed when Nitric Oxide sensor fitted. Also displayed as <b>NO (n)</b> when referenced to oxygen. The display will read 'O <sub>2</sub> > 20%' if referenced values selected and instrument is in clean ambient air.   |

- NOx:** Calculated total Nitric oxides displayed in ppm or mg/m<sup>3</sup>. Where  $\text{NOx} = \text{NO} + \text{P}\%\text{NO}$ , note P can be set from 0-9%, default = 5%. See SELECT menu 5.2.2. Also displayed as **NOx (n)** referenced to oxygen. The display will read 'O<sub>2</sub> > 20%' if referenced values are selected and instrument is sampling clean ambient air.
- SO<sub>2</sub> :** Sulphur Dioxide reading in ppm or mg/m<sup>3</sup>. Displayed when Sulphur Dioxide sensor fitted. Also displayed as **SO<sub>2</sub> (n)** referenced to oxygen. The display will read 'O<sub>2</sub> > 20%' if referenced values selected and instrument is in clean ambient air.
- O<sub>2</sub> ref %:** Toxic gas measurements can be referenced to defined oxygen levels. See SELECT menu for details.  
**(O<sub>2</sub>r)**



## B. COMBUSTION EFFICIENCY CALCULATION

The efficiency calculation is based upon British Standard BS845.

This identifies three sources of loss associated with fuel burning:

**Losses due to flue gasses:** Dry Flue gas loss,  
Moisture and hydrogen  
Sensible heat of water vapour  
Unburned gas

**Losses due to refuse:** Combustible in ash  
Combustible in riddlings  
Combustible in dust

**Other losses:** radiation  
convection  
conduction  
other unmeasured losses

Net efficiency calculations assume that the energy contained in the water vapour (formed as a product of combustion and from wet fuel) is recovered and the wet loss term is zero. Gross efficiency calculations assume that the energy contained in the water vapour is not recovered.

Since the fuel air mixture is never consistent there is the possibility of unburned/partially unburned fuel passing through the flue. This is represented by the unburned carbon loss.

Losses due to combustible matter in ashes, riddlings, dust and grit, radiation, convection and conduction are not included.

### Efficiency Calculation:

Known Data - Fuel:  $Q_{gr}$  = Gross Calorific Value (kJ/kg)  
 $Q_{net}$  = Net Calorific Value (kJ/kg)  
 $K1$  = Constant based on Gross or Net Calorific Value:  
 $K1g$  = ( 255 x %Carbon in fuel )/ $Q_{gr}$   
 $K1n$  = ( 255 x %Carbon in fuel )/ $Q_{net}$   
 $K2$  = % max theoretical  $CO_2$  (dry basis)  
 $K3$  = % Wet Loss  
 $H_2$  = % Hydrogen  
 $H_2O$  = % Water

Calculated data:

- Tnet = Net Temperature
- % CO<sub>2</sub> content in flue gas
- % Dry Flue Gas losses
- % Wet losses
- % Unburned carbon loss
- % Efficiency

**Unburned fuel Loss %** =  $K4 \times CO / (CO + CO_2)$   
Note: CO scaled in %

Where K4           = 70 for coke  
                       = 65 for anthracite  
                       = 63 for Bituminous coal  
                       = 62 for coal tar fuel  
                       = 48 for liquid petroleum fuel  
                       = 32 for natural gas

The formula for K4 is based on the gross calorific value Qgr. To obtain the loss based on net calorific value multiply by Qgr/Qnet. Since this loss is usually small this conversion has been ignored. This loss is subtracted from the efficiency.

**Oxygen Reference**      $CO(n) = CO \times \frac{(20.9 - O_{2r})}{(20.9 - O_{2m})}$

## C. CALCULATION OF FUEL DATA

For any fuel not specified by Kane International the net calorific value, gross calorific value and composition should be obtained from the fuel supplier.

The following fuel data has been calculated with reference to the efficiency calculation.

### Example 1:

|                       |                     |             |
|-----------------------|---------------------|-------------|
| Chemical composition: | C                   | 25%         |
|                       | H <sub>2</sub>      | 3%          |
|                       | H <sub>2</sub> O    | 50%         |
|                       | Q <sub>net</sub>    | 8.35 MJ/kg  |
|                       | Q <sub>g</sub>      | 9.3 MJ/kg * |
|                       | Max CO <sub>2</sub> | 20.4%       |

$$\begin{aligned} \mathbf{K1n} &= (255 \times \% \text{ carbon in fuel}) / Q_{\text{net}} \text{ (kJ/Kg)} \\ &= (255 \times 25) / 8350 = \mathbf{0.763} \end{aligned}$$

$$\begin{aligned} \mathbf{K1g} &= (255 \times \% \text{ carbon in fuel}) / Q_g \text{ (kJ/Kg)} \\ &= (255 \times 25) / 9300 = \mathbf{0.685} \end{aligned}$$

$$\mathbf{K2} = \text{Max \% CO}_2 = \mathbf{20.40}$$

$$\begin{aligned} \mathbf{K3} = \text{Wet Loss} &= [(9 \times \% \text{H}_2 + \% \text{H}_2\text{O}) / 9300] \times 2425 \\ &= [(9 \times 3 + 50) / 9300] \times 2425 \\ &= (77 / 9300) \times 2425 = \mathbf{20.08} \end{aligned}$$

$$\mathbf{K4} = \mathbf{65} \text{ (an approximation for wood) } *$$

The fuel values to program into the Analyser are as follows:

#### NATURAL GAS

|     |         |     |         |
|-----|---------|-----|---------|
| K1g | : 0.763 | K1n | : 0.685 |
| K_2 | : 20.4  | K_3 | : 20.08 |
| K_4 | : 65    | O2r | : 8.0   |

\* Assumed values in the absence of supplied data.  
See previous appendix for other fuels.

## D. ELECTROMAGNETIC COMPATIBILITY (CE) STATEMENT

European Council Directive 89/336/EEC requires electronic equipment not to generate electromagnetic disturbances exceeding defined levels and have adequate immunity levels for normal operation. Specific standards applicable to this meter are stated below.

As there are electrical products in use pre-dating this Directive, they may emit excess electromagnetic radiation levels and, occasionally, it may be appropriate to check the meter before use by:


Use the normal start up sequence in the location where the meter will be used.

Switch on all localized electrical equipment capable of causing interference.

Check all readings are as expected. A level of disturbance is acceptable.

If not acceptable, adjust the meter's position to minimize interference or switch off, if possible, the offending equipment during your test.

At the time of writing this manual (May 2016) Kane International Ltd are not aware of any field based situation where such interference has occurred and this advice is only given to satisfy the requirements of the Directive.

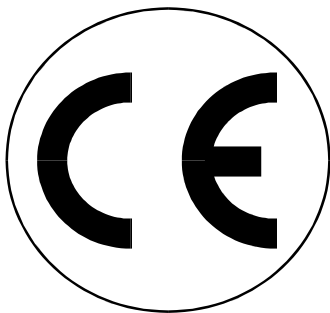

This product has been tested for compliance with the following generic standards:

EN 61000-6-3 : 2011

EN 61000-6-1 : 2007

and is certified to be compliant

Specification EC/EMC/KI/KANE945/1 details the specific test configuration, performance and conditions of use.

## END OF LIFE DISPOSAL

The Waste Electrical or Electronic Equipment (WEEE) Directive requires countries in the EU to maximise collection and environmentally responsible processing of these items.

Products are now labelled with a crossed out wheeled bin symbol to remind you that they can be recycled.

**Please Note:** Batteries used in this instrument should be disposed of in accordance with current legislation and local guidelines.







# PRODUCT REGISTRATION

Please complete, detach and return to: Kane International Ltd  
Kane House, Swallowfield, Welwyn Garden City, Hertfordshire, AL7 1JG

| Your Details       |  |
|--------------------|--|
| Name:              |  |
| Job Title:         |  |
| Company Name:      |  |
| Company Address 1: |  |
| Address 2:         |  |
| Town/City:         |  |
| County:            |  |
| Postcode:          |  |
| Country:           |  |
| Phone Number:      |  |
| Fax Number:        |  |
| Mobile Number:     |  |
| Email Address:     |  |

| Product Details   |                |
|---|----------------|
| <i>Note: Proof of Purchase may be required for warranty claims.</i>                                 |                |
| Date Purchased:<br>as numbers (28.01.15):   |                |
| Purchased From:   |                |
| Model Number:   | <b>KANE945</b> |
| Product Serial Number:<br>located on the rear product label<br>beneath the protective rubber sleeve |                |



Why did you buy a Kane Product?

- |  |  |
|--|--|
| <input type="checkbox"/> Made in the UK    | <input type="checkbox"/> Previous Owner                      |
| <input type="checkbox"/> Value for Money   | <input type="checkbox"/> Our Fixed Price Servicing Programme |
| <input type="checkbox"/> Kane Brand        | <input type="checkbox"/> Dealer Recommendation               |
| <input type="checkbox"/> Not your Decision | <input type="checkbox"/> Other:                              |

What brand was your previous analyser?

How did you hear about Kane?

- |  |  |
|--|--|
| <input type="checkbox"/> Magazine Advert         | <input type="checkbox"/> Trade Counter   |
| <input type="checkbox"/> Training School         | <input type="checkbox"/> Previous Owner  |
| <input type="checkbox"/> Personal Recommendation | <input type="checkbox"/> Internet Search |
| <input type="checkbox"/> Exhibition              | <input type="checkbox"/> Other:          |

Your feedback is important to us, please add any additional comments you would like to make with regard to your recent Kane purchase:

Thank you for completing this survey.  
All the information we have collected is confidential.  
We do not sell or share data with any other company or organisation.





Thank you for buying this  
analyser.

Before use, please register on  
our website

**[www.kane.co.uk](http://www.kane.co.uk)**



Scan the QR code to go directly  
to Register your Product on-line  
or complete, detach and return  
the Product Registration form in  
this manual.